




## ST3 to Yaesu Rotor Connections: Interface to Rotor Controller

### G5500

#### DIN 8 Plug Pin Connections:

1. EL 2 to 4.5V out ( to ST3 Interface )
2. Right
3. UP
4. LEFT
5. DOWN
6. AZ 2 to 4.5V out ( to ST3 Interface )
7. DC 12V to ST3
8. GND

#### DIN8 Socket View:

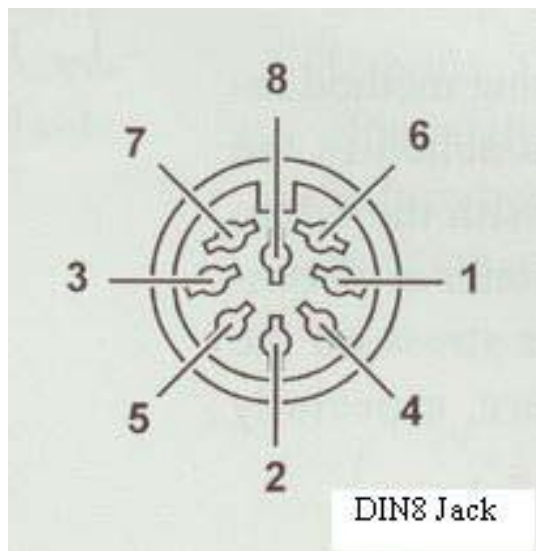

**73s/Dinesh Gajjar / 5<sup>th</sup> May 09**

For more details, please visit Project Page: <http://www.foxdelta.com>